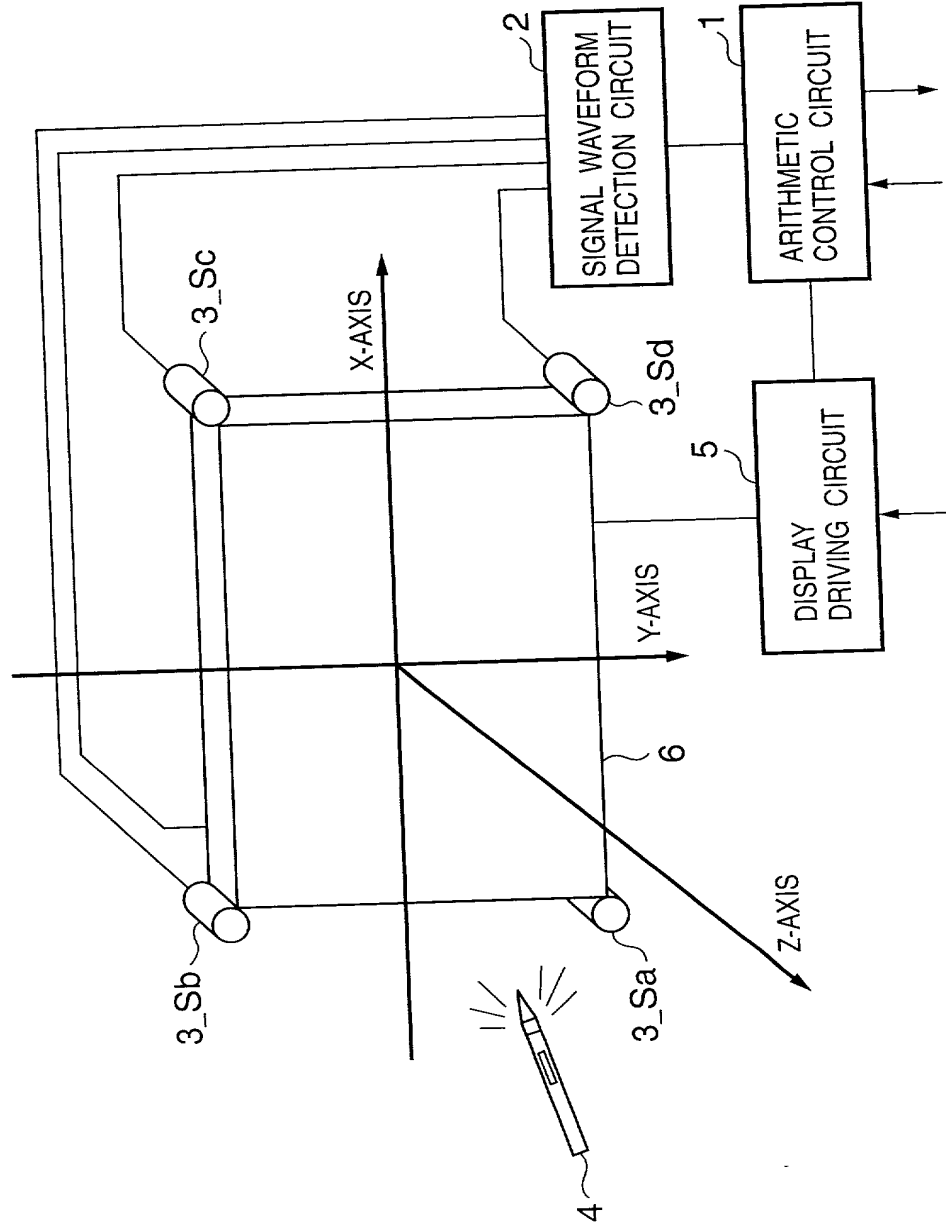


FIG. 1



THE DANCE



FIG. 3

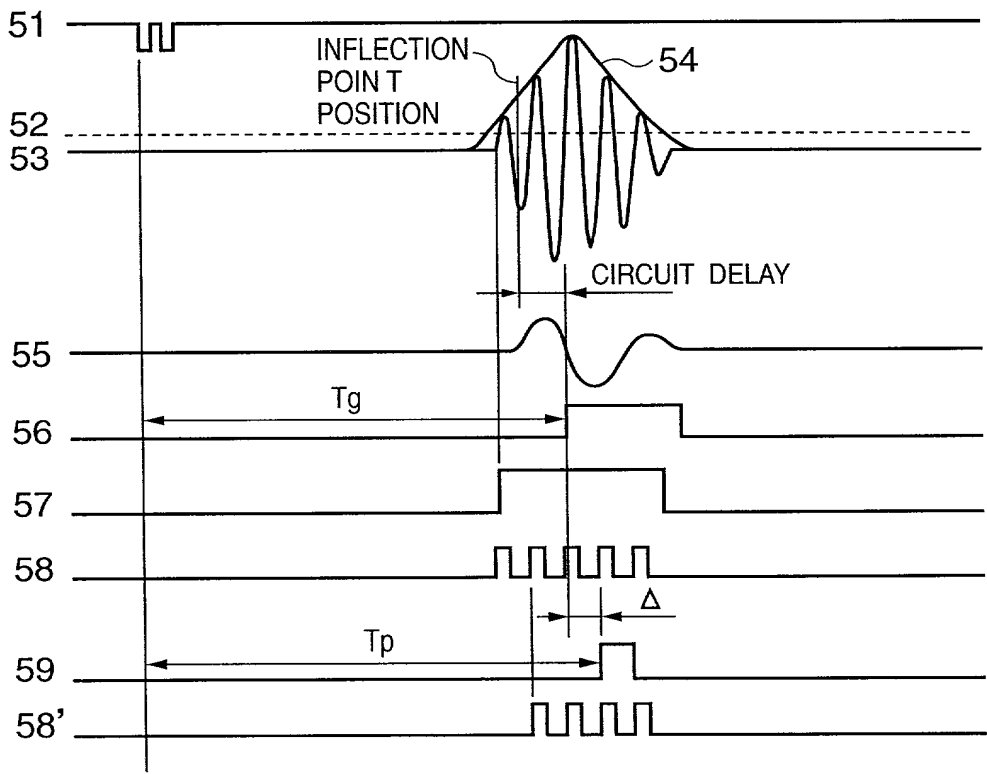


FIG. 4

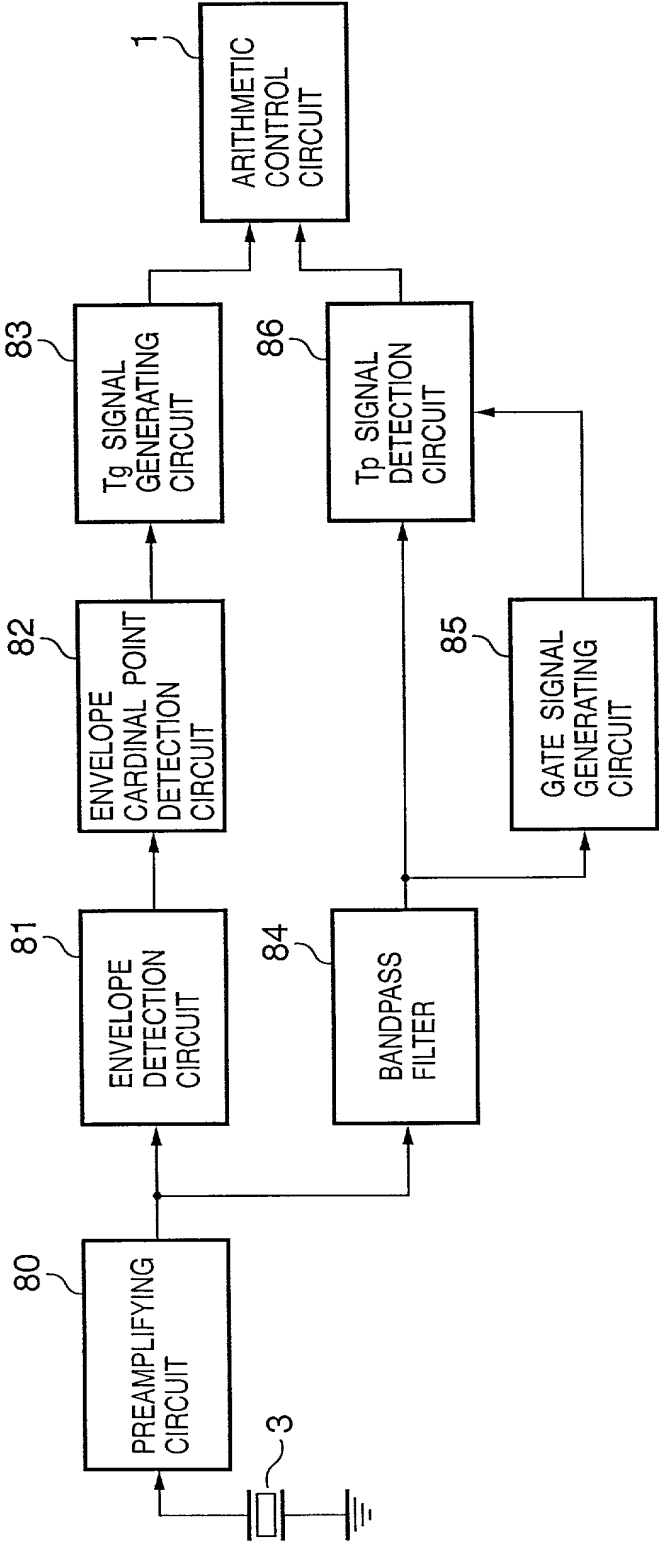


FIG. 5

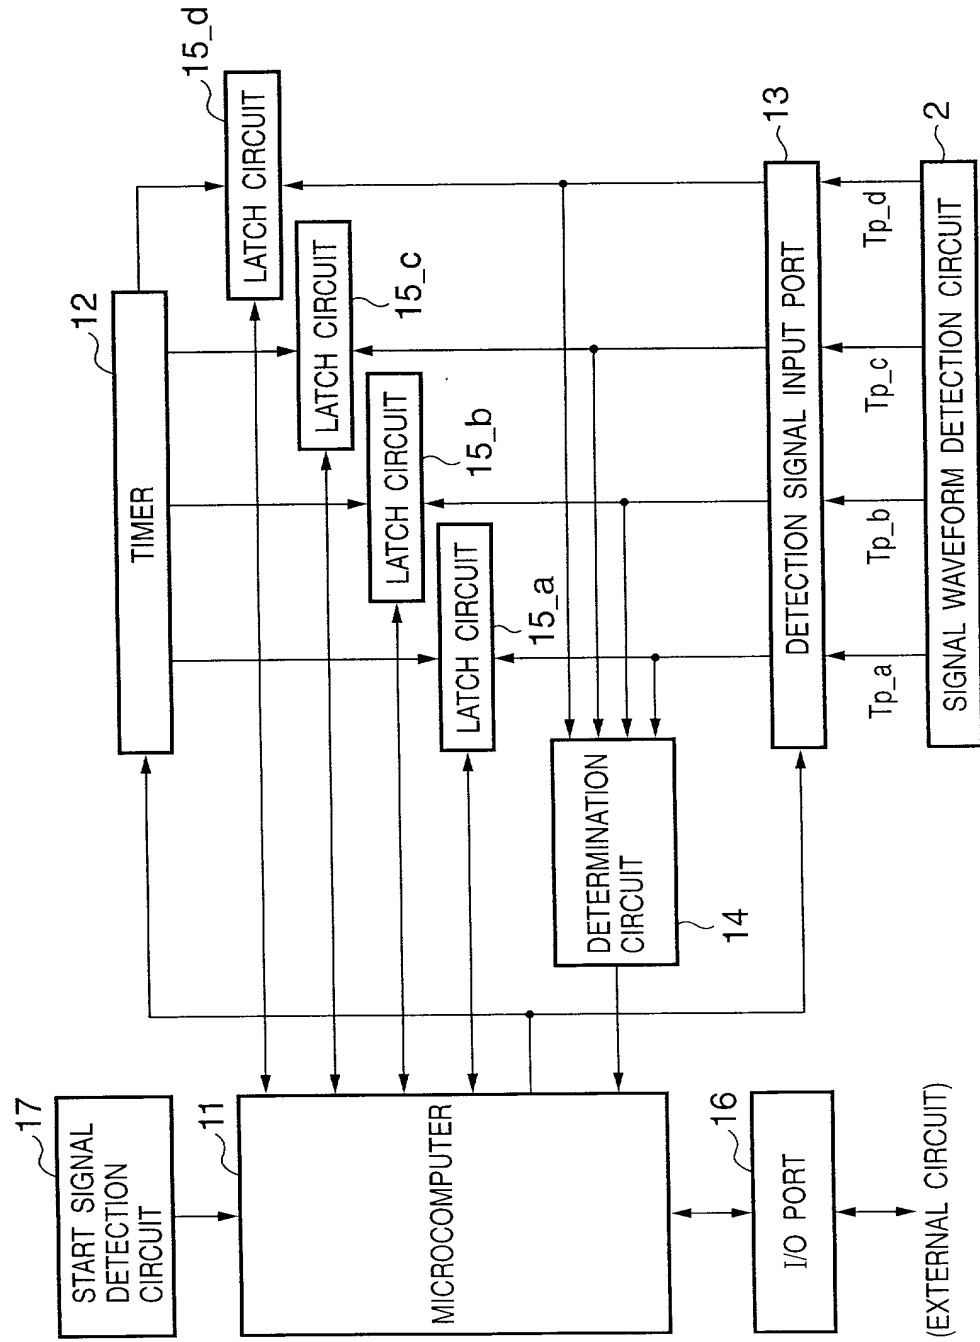


FIG. 6

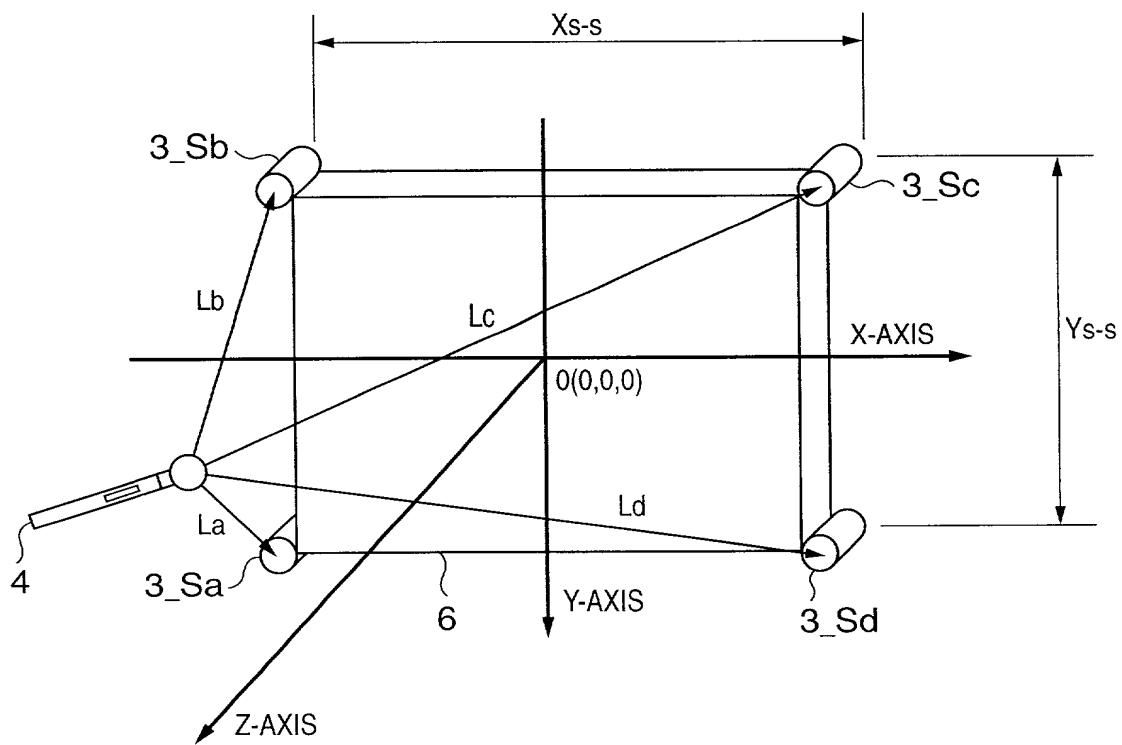


FIG. 7

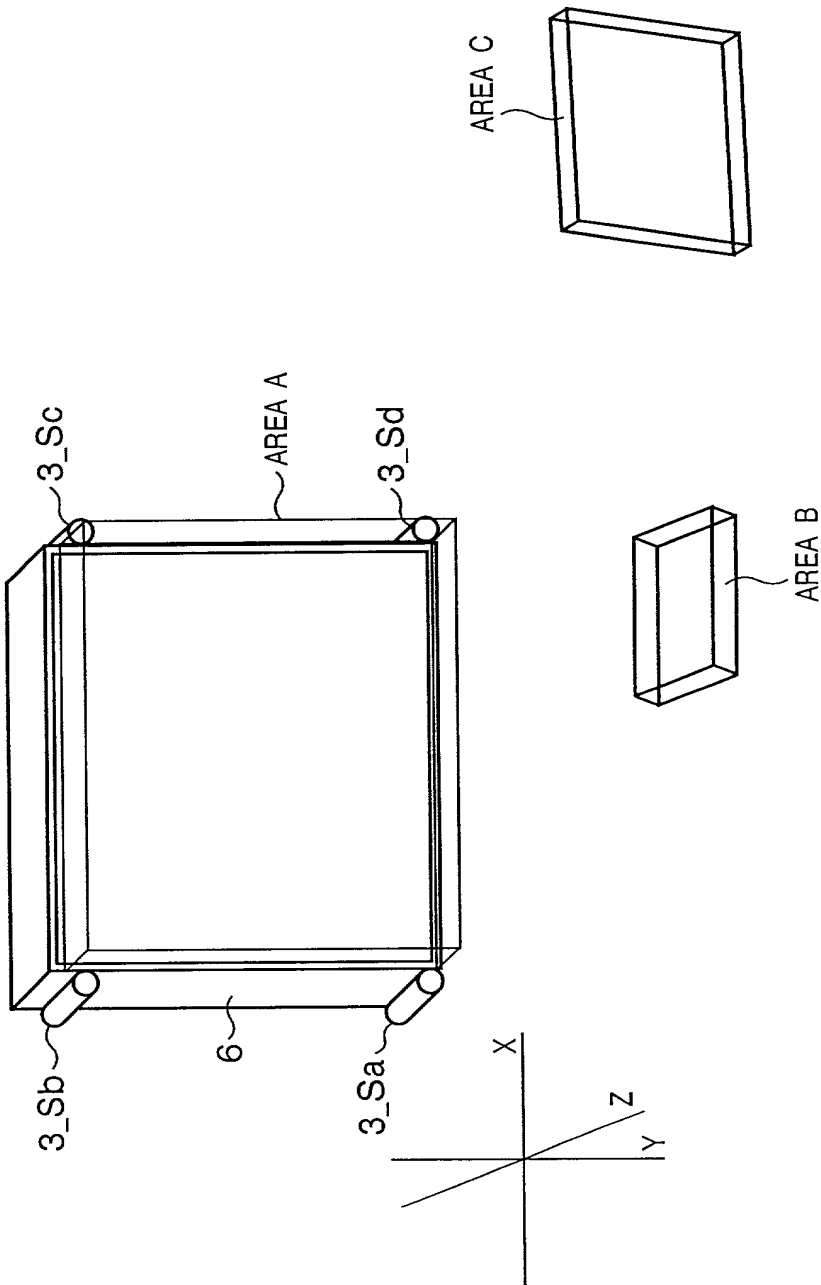


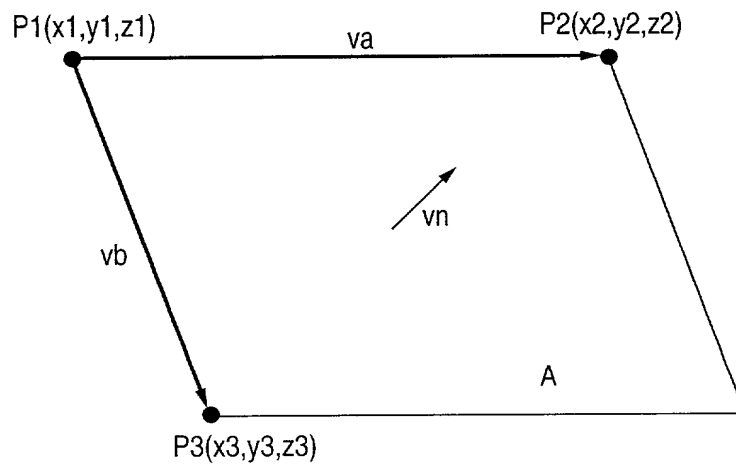
FIG. 8

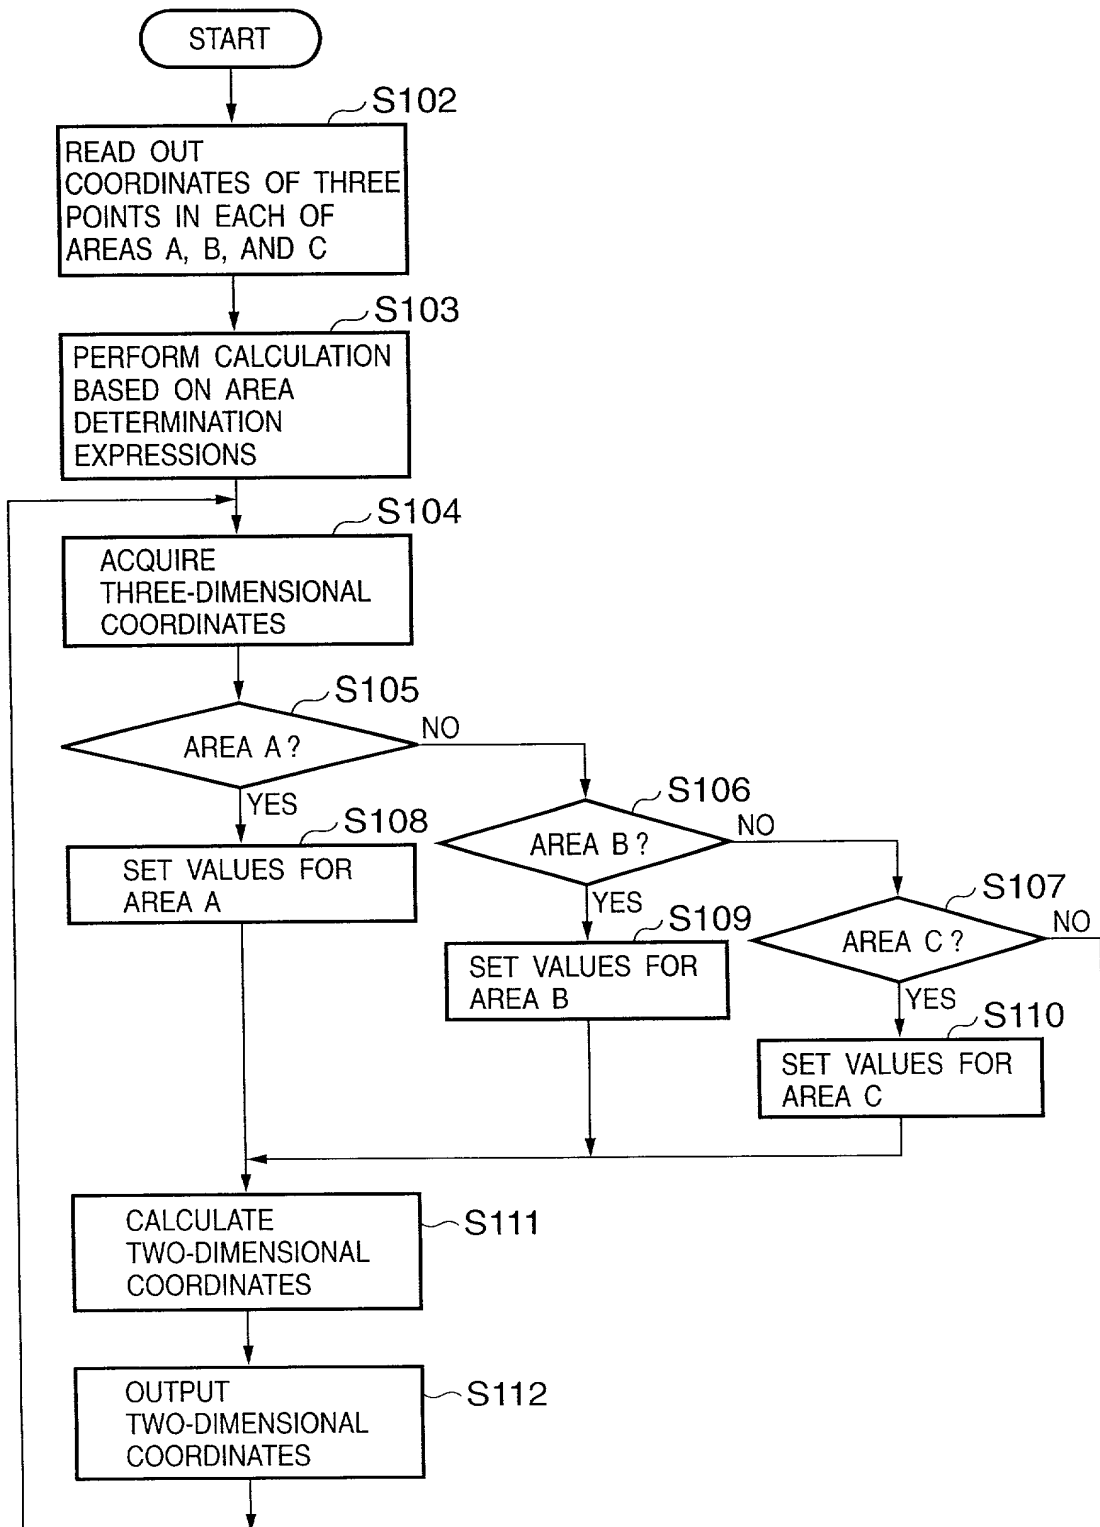
FIG. 9

FIG. 10

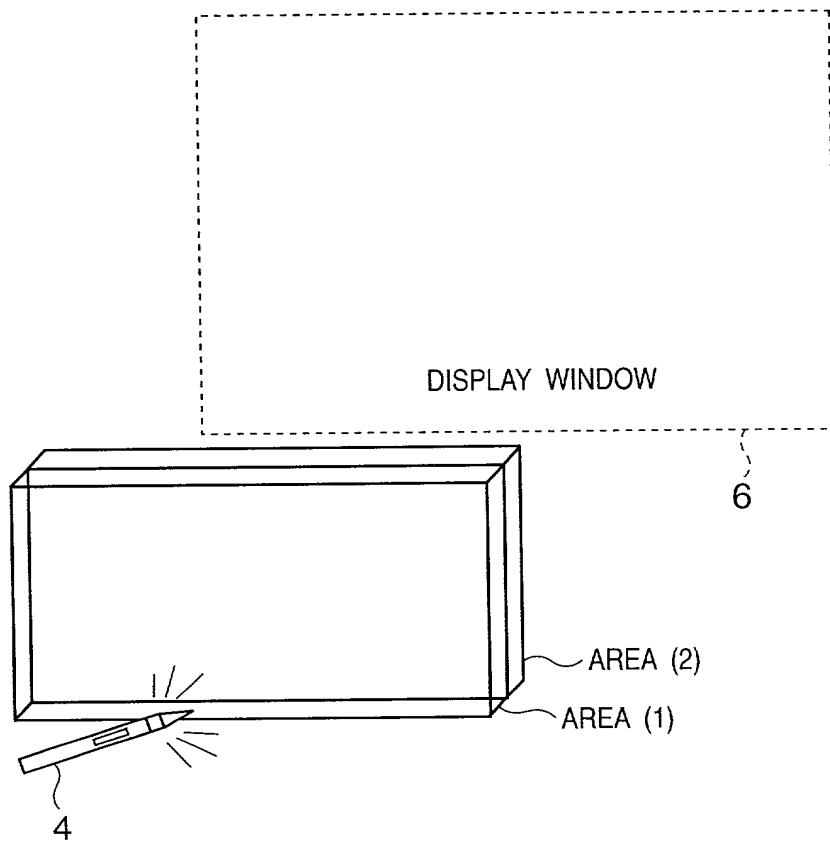


FIG. 11

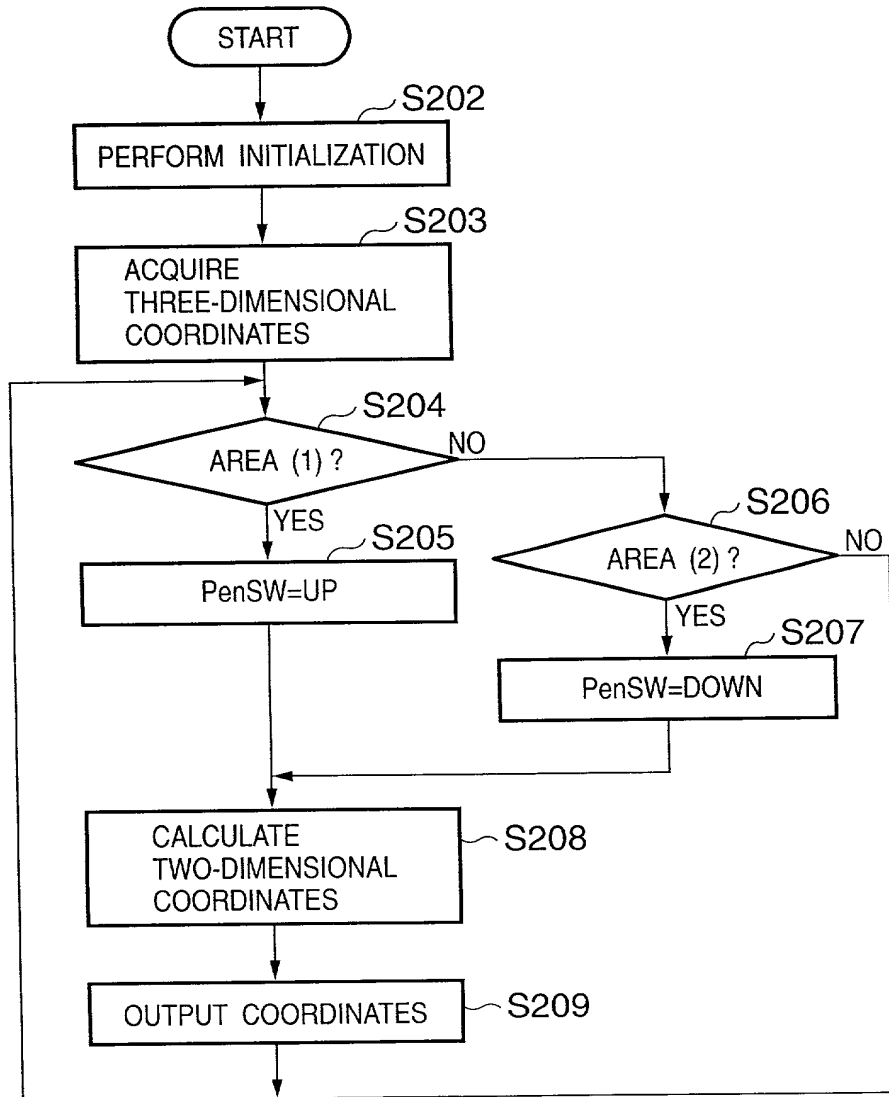


FIG. 12

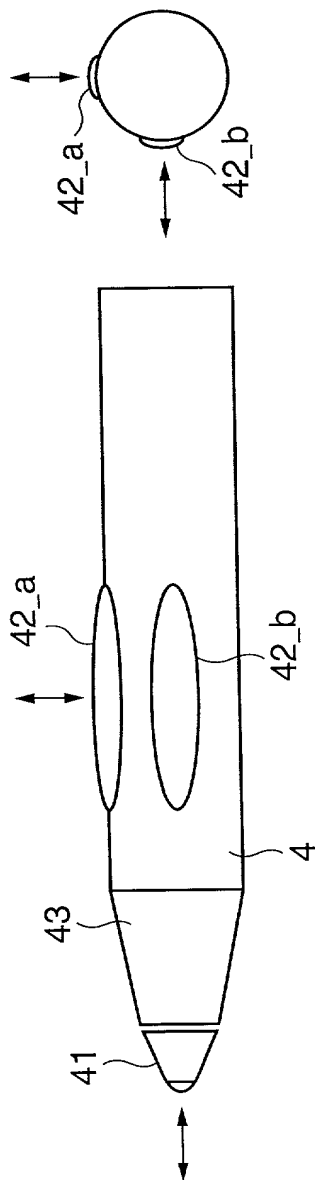


FIG. 13

AREA	PEN TIP SWITCH 41	PEN SIDE SWITCH 42_a	PEN SIDE SWITCH 42_b	PEN DOWN SIGNAL
AREA A	LEFT	LEFT	RIGHT	PEN TIP SW
AREA B	DOUBLE CLICK	RIGHT	LEFT	SIDE SW1
AREA C	LEFT	LEFT	RIGHT	DOWN